



Jumbo Tourer Kit Packing List & Assembly Instructions

Parts List

- 2 * Upright poles with elbows
- 1 * cross bar (pre-drilled)
- 20 * self tapping screws
- 2 * rivets
- 3 * rope channel sections
- 2 * female ball joint clips



Fitting Instructions

- Attach middle pole to uprights, assemble on a flat surface to ensure uprights are in line.
- Drill through pre drilled hole in tubing into plastic elbow
- Rivet together with supplied rivets
- Do the same on the other side.
(check figure 1.)



Fig 1

- Position female clip as per pic.
- Pre drill through the corner holes using a 3mm bit. Make sure you angle the bit to catch the aluminium angle beading - not necessary to do the one in middle as per pic. Attach with 4 self tappers. (check fig 2.)

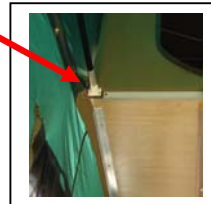


Fig 2.

- Affix rod guide / sail track to the underside of the base board in the three positions see **Fig 3**. The "C" section of the Rod guide / sail track facing out as per **Fig 2**, and fasten using the remaining self tappers. (No need to pre drill these as you will be drilling into marine ply)



Fig 3.

To open:

- Fasten assembled U tube spreader bar with the 3 velcro straps found in extended fly section.
- Pop ball from spreader bar into female housing. (check fig 2.)

To fold away:.

- Remove walls, fold and pack separately.
- Unclip spreader bar, as you fold the tent over, lay the bar with the flysheet on top of the folded tent.
- Pull over pvc cover as usual.